






(14) BODY PANEL & FENDER					
ITEM	PICTURE	STP NO.	REF. NO.	DESCRIPTION	REF FIN#
1		F-71516312-AK	C5NN 16312AK	Shell Type Fender with Bracket 6/800/2/4000/2600-4600SU/2610 3610/340A/420/445/445A/535/540A/540B/545 (C5NN16312AA/C5NN16312AU)	
2		F-71516312-F	D1NN 16312F	Square Fender RH 2000/3000	
3		F-71516313-B	D1NN 16313B	Square Fender LH 2000/3000	
4		F-71516392-AB	82NT 16N392AB	Square Fender RH 3600/3610	
5		F-71516393-AB	82NT 16N393AB	Square Fender LH 3600/3610	
6		F-71516312-E	C9NN 16312E	Square Fender RH 5000	
7		F-71516313-R	D0NN 16313R	Square Fender LH 5000	
8		F-71516312-EA	E4NN 16312EA	Square Fender RH 6600/6610	
9		F-71516313-PB	D3NN 16313PB	Square Fender LH 6600/6610	
10		F-71516315-DA	E1NN 16315DA	Fender Skin 2000/3000	
11		F-71516321-F	C5NN 16N321F	'U' Type Bolt 3000	
12		F-71516341-A	C5NN 16N341A	Support, Fender Safety 3000/5000	
13		F-71516474-L	D4NN 16474L	Elbow, Running Board Installing 2000/3000	
14		F-71516486-E	C5NN 16486E	Elbow, Foot Board Mounting 2000/3000/3600	
15		F-71616625-F	C5NN 16625F	Engine Hood RH 2000/3000/4000	
16		F-71616626-J	C5NN 16626J	Engine Hood LH 2000/3000/4000	
17		F-71616625-M	C7NN 16625M	Engine Hood RH 3600/3610	
18		F-71616626-L	D3NN 16626L	Engine Hood LH 3600/3610	
19		F-71616625-E	C7NN 16625E	Engine Hood RH 5000	
20		F-71616626-G	C7NN 16626G	Engine Hood LH 5000/5100/6600/6900	
21		F-71616768-B	D5NN 16N768B	Engine Hood RH 5600-7600/5100/7100	

ITEM	PICTURE	STP NO.	REF. NO.	DESCRIPTION	REF FIN#
22		F-71616626-B	D5NN 16626B	Engine Hood LH 5600-7600/5100/7100/5110/5610/7610	
23		F-71616627-R	D0NN 16N627R	Panel assy. 2000/3000/5000/6600/6610	83918794
24		F-71616644-B	C5NN 16N644B	Bonnet Handle 2000/3000/5000/6600/6610	
25		F-71916658-T	E1ADKN 16658	Lock assy, Engine Hood 2000-6610	