

**Wheel Repair Kits suitable for FORD Tractors**

ITEM	STP NO.	REF. NO.	DESCRIPTION
1	F-WRK-01		Wheel Repair Kit, 4000, 4600, 4610
	including:	LM48548/ LM48510 LM11949/ LM11910 310195	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal
2	F-WRK-02		Wheel Repair Kit, 5000-7000, 5600, 5610, 5700, 6600, 6610, 6700, 6710, 7600, 7610, 7700, 7710
	including:	LM501349/LM501310 M12649/M12610 E0NN 1190AA	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal
3	F-WRK-03		Wheel Repair Kit; Dexta, Super Dexta, 2000, 2600, 2610, 3000, 3600, 3610, 3900, 3910, 4100, 4110
	including:	LM67048/LM67010 LM11949/LM11910 957E 1190A	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal
4	F-WRK-04		Wheel Repair Kit; 8000, 8600, 8700, 9000, 9600, 9700, TW5, TW10, TW20, TW15, TW25
	including:	25590/25520 02474/02420 E4NN 1190AA	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal
5	F-WRK-05		Wheel Repair Kit; TW5, 10,15, 20, 25, 30, 30HD, TW35, 8530-8830
	including:	3780/3720 2788/2720 E4NN 1190AA	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal
6	F-WRK-06		Wheel Repair Kit; 9N, 2N, 8N, NAA
	including:	15118/15250 09074/09196 C0NN 1190B	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal (NCA 1190A)
7	F-WRK-07		Wheel Repair Kit; 600, 700, 800, 900
	including:	15123/15245 09067/09195 C0NN 1190B	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal (NCA 1190A)
8	F-WRK-08		Wheel Repair Kit; 601, 701, 801, 901, 2000 (1958-64), 4000 (1958-64)
	including:	LM67048/LM67010 LM11949/LM11910 C0NN 1190B	Inner Bearing, Cone and Cup Outer Bearing, Cone and Cup Seal (NCA 1190A)



F-WRK-01



F-WRK-02



IH-WRK-05



IH-WRK-01



IH-WRK-06

<b>Wheel Repair Kits suitable for International Harvester Tractor</b>			
ITEM	STP NO.	REF. NO.	DESCRIPTION
1	<b>IH-WRK-01</b>		<b>Wheel Repair Kit, A, B, C, Super A, 100, 130, 200, 230</b>
	including:	15118/15250	Inner Bearing, Cone and Cup
		09074/09196	Outer Bearing, Cone and Cup
		55453D	Seal
		49117D	Sleeve
		49118DA	Seal
2	<b>IH-WRK-02</b>		<b>Wheel Repair Kit, H, Super H, M, MD, MF, SMD, W4, SW, 300, 330 utility (Kit used only on IH OEM wide front assy.)</b>
	including:	14138A/14274	Inner Bearing, Cone and Cup
		1779/1729	Outer Bearing, Cone and Cup
		48539DA	Seal
		48548D	Sleeve
		43828D	Gasket
3	<b>IH-WRK-03</b>		<b>Wheel Repair Kit, 140, 200, 230, 240, 330, 340, 404, 424, 444, F504, 2504</b>
	including:	LM67048/ LM67010	Inner Bearing, Cone and Cup
		LM11949/LM11910	Outer Bearing, Cone and Cup
		372440R91	Seal
		49117D	Sleeve
		49116D	Gasket
4	<b>IH-WRK-04</b>		<b>Wheel Repair Kit, 385, 454, 495, 574, 584, 595, 674, 695, 784, 2500</b>
	including:	LM48548/ LM48510	Inner Bearing, Cone and Cup
		M12649/ M12610	Outer Bearing, Cone and Cup
		530104R91	Seal
		406295R1	Sleeve
5	<b>IH-WRK-05</b>		<b>Wheel Repair Kit, 544, 560, 656, 706, 756, 806, 856, 1026, 1206, 1256, 1456, 666, 766, 966, 1066, 1466, 1566, 1468, 686, 786, 886, 986, 1086, 1486, 1586</b>
	including:	LM603049/LM603011	Inner Bearing, Cone and Cup
		LM48548/ LM48510	Outer Bearing, Cone and Cup
		370254R91	Seal
		48703D	Sleeve
		369860R1	Gasket
6	<b>IH-WRK-06</b>		<b>Wheel Repair Kit, 460, 504, I544, 606, 2606</b>
	including:	LM48548/ LM48510	Inner Bearing, Cone and Cup
		M12649/ M12610	Outer Bearing, Cone and Cup
		48539DA	Seal
		48548D	Sleeve
		369860R1	Gasket
7	<b>IH-WRK-07</b>		<b>Wheel Repair Kit, 574, 584, 674, 2500, 454 Ind.</b>
	including:	LM67048/ LM67010	Inner Bearing, Cone and Cup
		LM11949/LM11910	Outer Bearing, Cone and Cup
		530103R91	Seal
		406293R1	Sleeve



IH-WRK-01



F-WRK-04



IH-WRK-03